


ADJUSTABLE BARBECUE LIGHT

Model #3578



Congratulations on purchasing the new Fire Magic fully adjustable barbecue light. This accessory will enhance your outdoor cooking experience, enabling you to continue cooking long after the sun has set. The light head has 2 multi-directional flexi-angles, making this a completely versatile and indispensable light suitable for any barbecuing location.

PARTS LIST

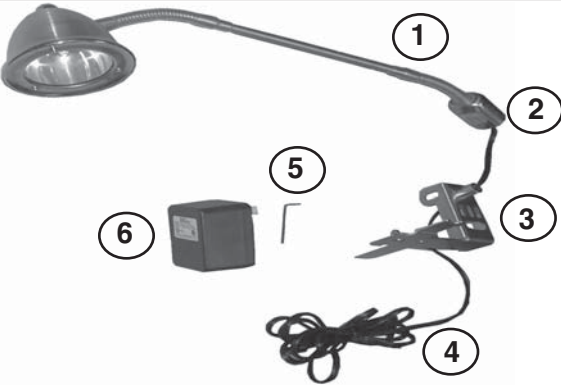

| ITEM NO. | DESCRIPTION |
|----------|---------------|
| 1 | Light |
| 2 | Light base |
| 3 | Light bracket |
| 4 | Light cord |
| 5 | Allen wrench |
| 6 | Transformer |

INSTALLATION

FOR YOUR SAFETY, ENSURE THE LIGHT IS UNPLUGGED AND COOL TO THE TOUCH.

1. Unplug the cord from the power transformer, if attached (see Fig.1).
2. Slide the cord through the light bracket and into the base of the light (see Fig. 2 and Fig. 3).
3. Using the Allen wrench provided, found with the transformer, tighten the screw at the back of the base of the switch section of the light (see Figure 4). **DO NOT** loosen or remove the 2 screws on the **side** of the switch section of the light.
4. Insert the light bracket (Item 3) firmly into the slot on the left side of your barbecue with the offset facing either in or out to best fit the spit length.
5. Plug the cord back into the transformer and plug the transformer into electrical outlet.

If you need to install/change the bulb, follow the directions on other side.



Fig. 1



Fig. 2



Fig. 3

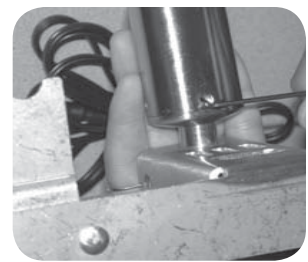


Fig. 4

READ THE SAFETY INSTRUCTIONS ON THE OTHER SIDE BEFORE USE.

CAUTION: LIGHT IS HOT WHEN LIT.

To install/replace the bulb simply follow the steps below:

FOR YOUR SAFETY, ENSURE THE LIGHT IS TURNED OFF OR UNPLUGGED AND COOL TO TOUCH

1. Using a Phillips screwdriver, remove the two screws from the bulb guard surround (see Fig. 6).
2. Remove the pivot handle and then remove the knurled nut. (see Fig. 7A & 7B).
3. Carefully lift away the glass UV filter, bezel, and rubber seal as one piece (see Fig. 8).
4. Using a clean soft cloth, carefully remove the bulb (see Fig. 9). Replace with a new bulb of the same type. **Use max. 35 Watts, 25 volt, Type T bulb, 120V 60Hz AC ONLY. Do not touch bulb with bare skin at any time. Oil from skin may damage the bulb.**
5. Replace seal, UV filter, and bezel, aligning the holes with the screw points in the light head.
6. Replace the knurled nut, pivot handle, and the screws. Do not over tighten.



IMPORTANT SAFETY INSTRUCTIONS

- READ BEFORE USE -

KEEP THESE INSTRUCTIONS FOR REFERENCE

CAUTION: LIGHT IS HOT WHEN LIT
WARNING

To reduce the risk of fire, electric shock, exposure to excessive UV radiation, injury to persons, or damage to property, observe the following:

1. **Light gets hot quickly!** Only touch or handle the switch or plug when turning it on or off.
2. Turn off/unplug light and **allow to cool** before replacing the bulb.
3. **Do not** touch hot lens, guard, or enclosure.
4. **Do not** remain in light if skin begins to feel warm.
5. **Do not** look directly at bulb when lit.
6. Keep light away from combustible materials.
7. Use **ONLY** the T-Type bulb specified above and below.
8. **Do not** operate light with a missing or damaged guard, bulb containment seal, or UV light filter.
9. **ONLY** use handle on light head or flex section when adjusting direction of beam.
10. To extend the life and protect the beauty of the light, store in a dry place, away from weather.
11. Inspect cord. **DO NOT USE** if damaged - replace cord.

Important: Do not touch the bulb at any time. Oil from skin may damage the bulb. Use a clean, soft cloth when handling the bulb.

IMPORTANT
USE MAX 35 WATTS, 25 VOLT,
TYPE T BULB, 120V 60Hz AC ONLY