



## BEVERAGE CENTER

# INSTALLATION INSTRUCTIONS & OWNER'S MANUAL

**INSTALLER:** Leave these instructions with consumer.  
**CONSUMER:** Retain for future reference.

 


**IMPORTANT:** READ ALL INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION OR USE.

### **⚠ WARNING**

#### Electrical Grounding Instructions

This electrical appliance is equipped with a three-pronged (grounding) plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong GFI protected receptacle. Do not cut or remove the grounding prong from the plug. See this page for instructions concerning proper use of this appliance with an extension cord and for properly grounding a two-pronged outlet.

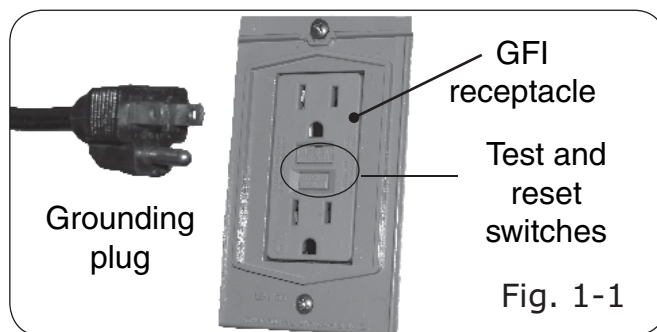


Do not operate any appliance with a damaged cord or plug, after an appliance malfunction, or after the appliance has been dropped or damaged. Return the appliance to your dealer or authorized service facility for inspection, repair, or electrical/mechanical adjustment.

### ELECTRICAL GROUNDING

 To protect from electrical shock, this appliance must be grounded while in use.



Two-pronged outlets may be grounded by use of an adapter as shown in Fig. 1-2. The grounding tab extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box as shown in Fig. 1-1.

If an extension cord is used, it must be a three-pronged cord intended for outdoor use. These cords are identified by the marking: "Suitable for use with outdoor appliances; store indoors while not in use." The cord must be rated at or above the rating of this appliance.

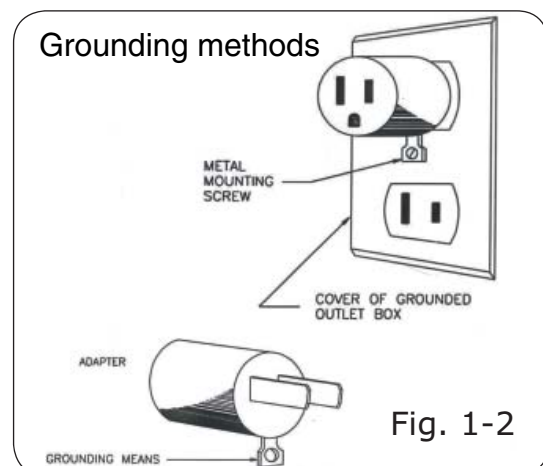

# PARTS LIST

  Item No.	Description	Qty.
1.	Sink	1
2.	Faucet	1
3.	Blender kit	1
4.	Cutting board	1
5.	Condiment holder with lid	2
6.	Food/Beverage holder with lid	2
7.	Waste water container	1

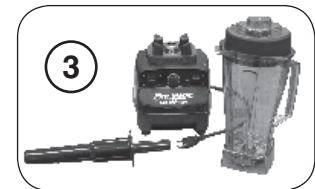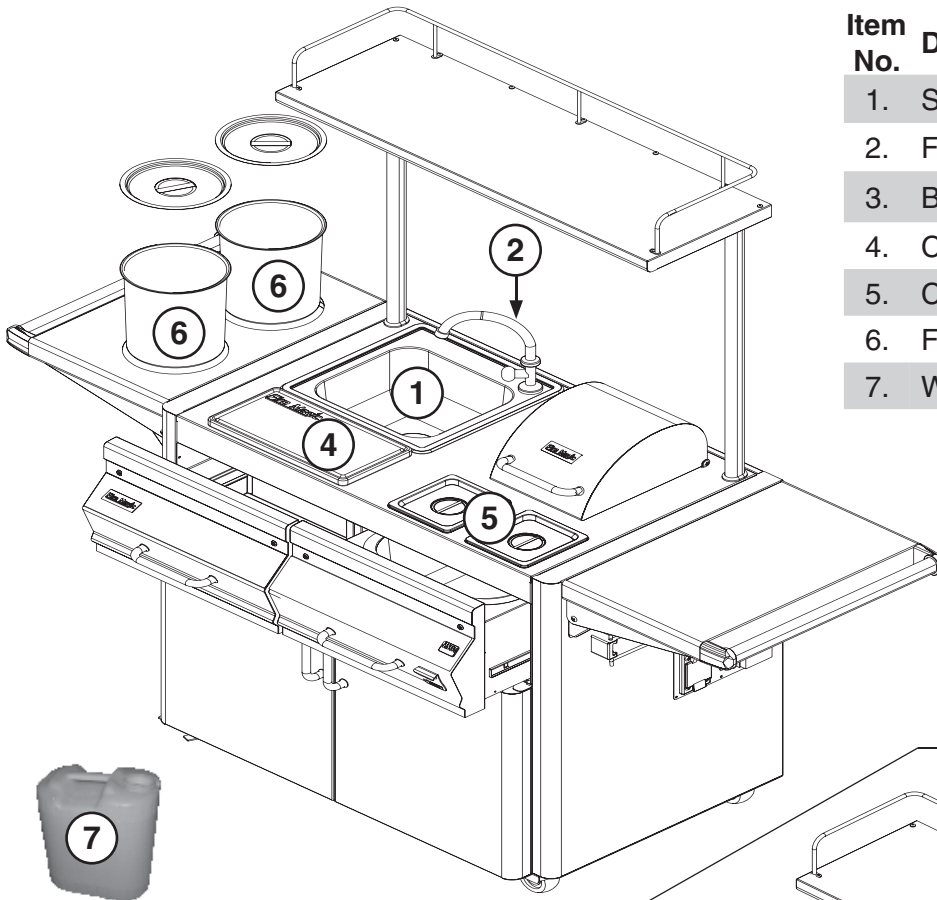


Blender kit (packed separately)

Blender kit (packed separately)



Item No.	Description	Qty.
1.	Sink	1
2.	Faucet	1
3.	Blender kit	1
4.	Cutting board	1
5.	Condiment holder	2
6.	Electrical junction box	1

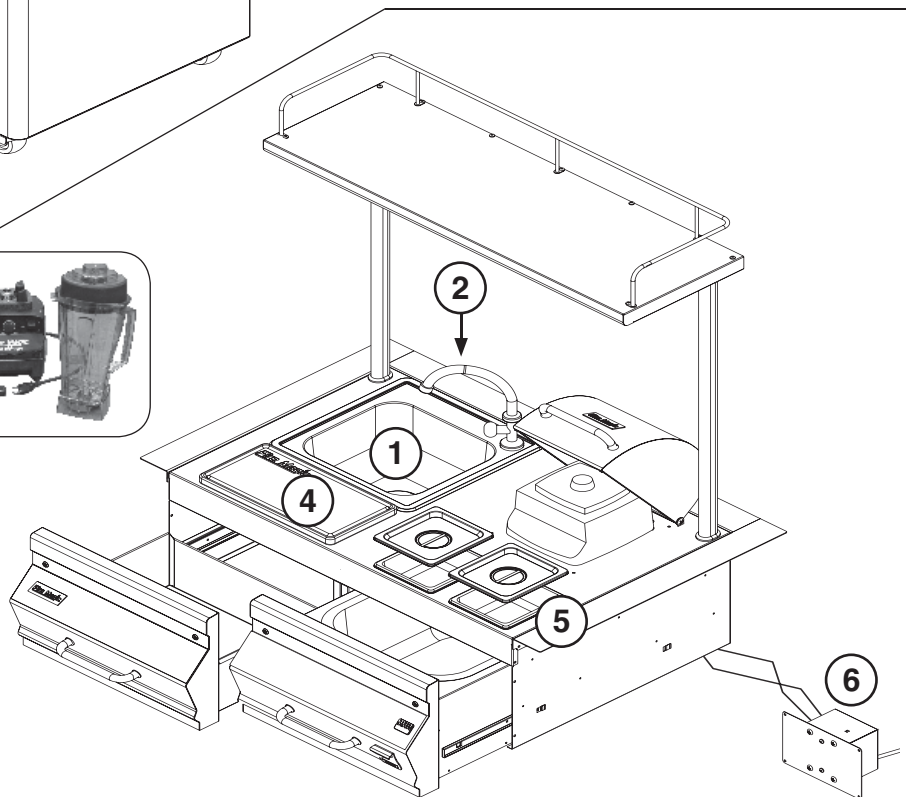 

The beverage center is available in both built-in and portable models.

Built-in and portable models come with a sink, cutting board, blender, an equipment drawer, drawer-front bottle opener, and a clean ice drawer. The unit is also topped with a lighted covering that sports a wine glass rack and additional upper storage area.

Portable models come with shelves, a storage area containing two full-sized ice trays and two wine holders for cooling beverages, a wheeled cart, side-folding paper-towel rack, and built-in transformer box.

# INSTALLATION

## Built-in units only

Prepare a cut-out in the countertop as specified in Table 1 and shown in Fig. 3-1. Note additional clearance required to the rear for the blender cover to open fully.

Counter Cut-out Dimensions (Table 1)	
Counter Opening Height*	12"
Counter Opening Width*	38"
Counter Opening Depth*	23-3/4"

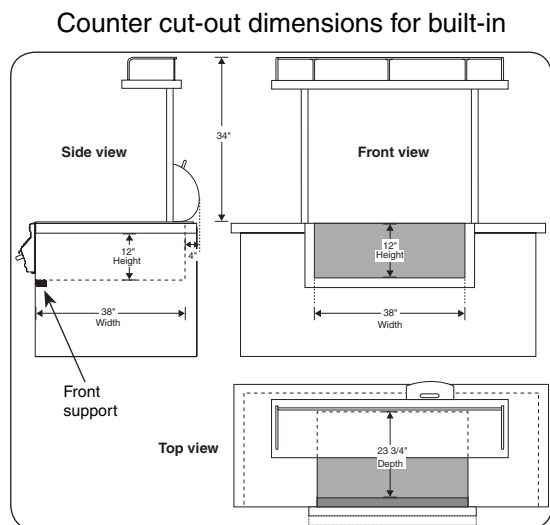 


Fig. 3-1

### **⚠ WARNING**

This appliance must be connected to a grounded electrical source.

Install a grounded 110-volt GFI receptacle beneath the countertop within 5 feet of the blender base so that the blender can be plugged into it. Install the electrical junction box near the GFI receptacle so that it can be plugged in there as well. The wires from the box are already connected to the beverage center.

The transformer box must be put inside the enclosure before the beverage center is installed.

After the enclosure cut-out and the electrical and plumbing hookups are prepared, place the beverage center into the cut-out. Keep all electrical wires from being pinched between the barbecue and the enclosure.

The beverage center will rest on the countertop by its stainless-steel hanger and on the front support shown in Fig. 3-1 underneath the face.

Silicon sealant may be applied around the top edge of the countertop cut-out to create a barrier between the housing and countertop capable of keeping out fluids. Do not use silicon between the blender base and the stainless-steel housing, as the base must be removable for cleaning and maintenance.

Drain sink to container or drain line

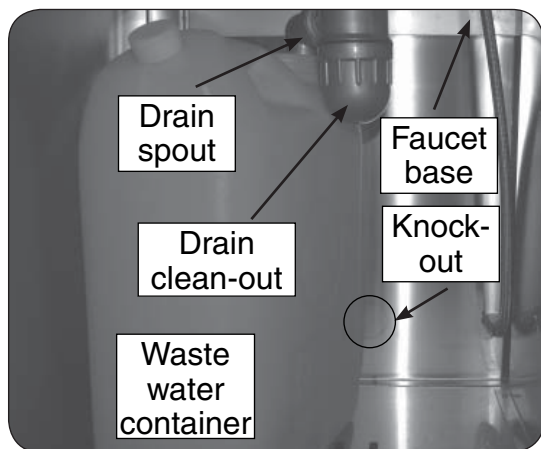 



Fig. 3-2

## Portable cart only

 Locate the cart on a flat, level surface near desired electrical and water lines. Lock the wheels as described in the **(Un)locking casters (cart only)** section. For the portable beverage center cart, plug the end of an extension cord matching the requirements on the cover into the left-most electrical receptacle on the right side of the cart.

## **⚠ WARNING**

Do not use blender in rain or wet conditions.

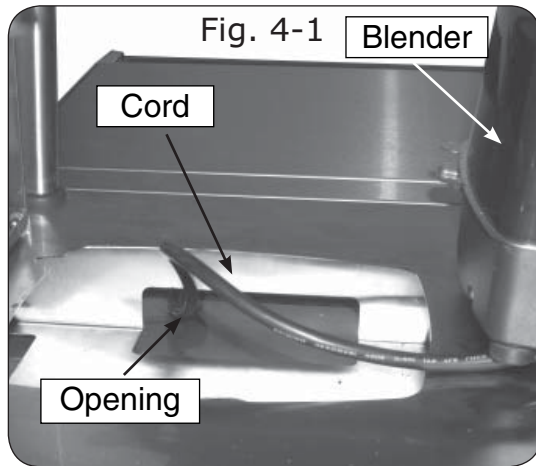

## **Place blender in blender mounting**

Open the domed lid attached to the right back of the countertop. Unpack the blender and read the instructions.

 
Feed the three-pronged electrical cord into the blender opening and through the right-side opening (Fig. 4-1). From there, plug it into the nearest grounded electrical outlet.

In the cart, the nearest outlet is located in the right-side wall. Lower the cord into the right-side wall and then open the doors and remove the middle right-side drawer. Locate the blender cord through the opening on the right above the receptacle (Fig. 4-2) and plug it in.

Lower the blender base carefully into the middle of the blender mounting hole until it sits firm and level. Take special care with the blender's circuit breaker reset switch on the right rear of the blender. It is helpful to lower the back of the blender into place first, starting with the cut-out for the breaker switch.

See blender instructions for additional details on blender installation, use, and maintenance. Test the blender and electrical connection by applying and turning off power without the container in place.

Plug-in blender inside left cart wall

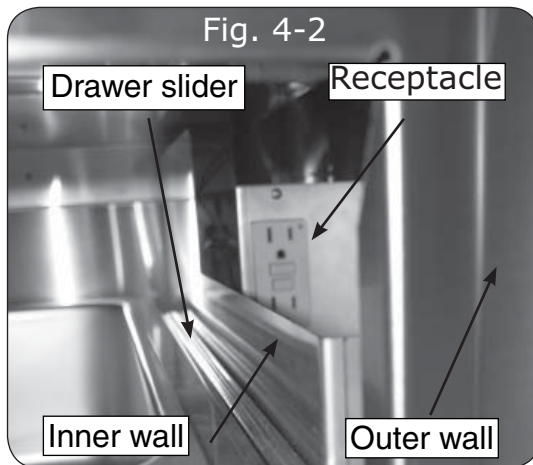

## **Place the cutting board**

Unpack the wood cutting board and place the four (4) rubber feet into the four (4) depressions on top of the counter in front of the sink (Fig. 4-3). The cutting board is designed to stay firmly in place while in use and yet be easy to remove, clean, and store as needed.

 
## **Plumb or set up waste water disposal**

The sink comes with a plastic trap and drainpipe extending just below the sink (see Fig. 3-2).


A waste water container may be placed under the sink. It must then be periodically checked by opening the front left door (cart only) and emptied when full.

Alternately, a permanent waste water drain may be plumbed from under the sink out through the knock-out in the rear left (cart only) or the enclosure (built-in only) to an appropriate drain. Remove the cart knock-out by striking it forcefully in the center with

Match cutting board feet to holes

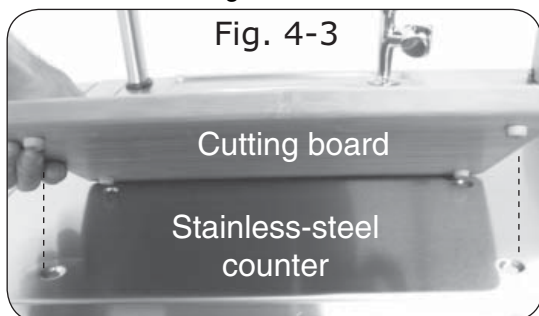

Cart water hookup

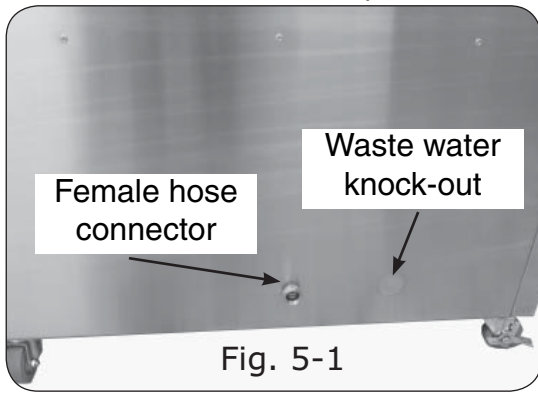 

a mallet or other appropriate tool. Observe all locally applicable codes.

### Attach a water source (cart)

The sink comes pre-installed and is plumbed so that a garden hose or other pressurized water-supply line can be connected to the female hose connector centered in the lower end of the back of the cart (see Fig. 5-1). The connector on the garden hose must be clean and free of foreign material. Screw the end of the hose onto the female hose connector.

Slide the holders into the shelf-top holes



### Attach a water source (built-in)

Plumb a water line through the inside of the enclosure to the 1/2" NPS male fitting at the base of the faucet.

### Place stainless-steel bottle/food holders (cart only) and condiment storage containers (built-in and cart)

Unpack the stainless-steel bottle/food holders and condiment storage containers with lids.

Slide the containers into countertop



Place the condiment storage containers in the rectangular holes in the top of the counter in front of the blender. Cover them with the rectangular lids (Fig. 5-3).

On the cart only, lift the left shelf and lock it into place following the instructions below, then insert the two stainless-steel bottle holders into the circular holes in the top of the shelf (see Fig. 5-2).

Alternately, a tap for draught beverages could be installed/inserted through the rear circular hole.

Paper towel holder (cart only)

 


### Install paper towel holder (cart only)

The rectangular mounting bracket for the paper-towel holder comes pre-attached to the front right side of the cart. Unpack the paper-towel holder hanger, squeeze the open ends together slightly, and insert them into the mounting bracket (Fig. 5-4). Next, release the hanger so that the ends poke out through the holes in the top and bottom of the mount.

## OPERATION

Caster in locked position (cart only)

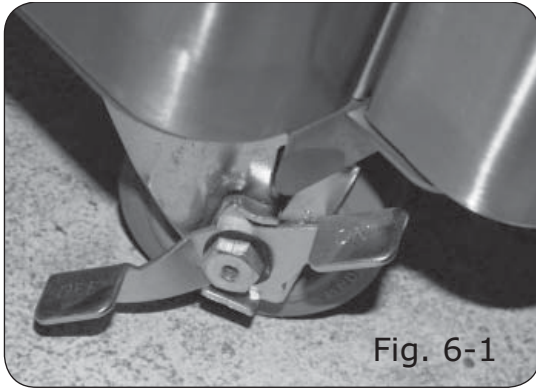

### (Un)locking casters (cart only)

To lock a caster press down on the side of the lever with the word "OFF" stamped on it until it stops and the caster will not turn. To unlock, press down on the side stamped "ON."

### Connecting the cart to electrical power

To use the electrical outlets, blender, and electrical sockets (cart only), the beverage center must be connected to electrical power. On the cart, this is performed by connecting a grounded electrical extension cord rated for outdoor use between the cart and line power.

Electrical connectors (cart only)



Plug the male end of the extension cord into an active electrical outlet and the female end into the left-most electrical connector on the right side of the barbecue. Other electrical devices such as the rotisserie may be plugged into the electrical outlets on the right of the line-power hookup.

Using the light switch

Fig. 6-3



### Turning the light on and off

There is a cylindrical stainless-steel button located underneath the right side of the light panel/wine glass storage rack/storage shelf. Press the button to turn on the two halogen lights underneath the rack. Press it again to turn the lights off.

**Note:** The beverage center must be hooked up to an active electrical power source before the lights will operate.

Magnetic bottle opener (left or right drawer)

 


### Using magnetic bottle openers

The magnetic bottle openers are located on the right side of both left and right top shelves. To use simply insert the top of the bottle as shown in Fig. 6-4 and pull the bottom of the bottle downward until the cap is removed. Caps made of ferrous metals will then stick to the magnet instead of falling to the ground. Remove the cap from the magnet and discard.

# OPERATION


Left storage drawer

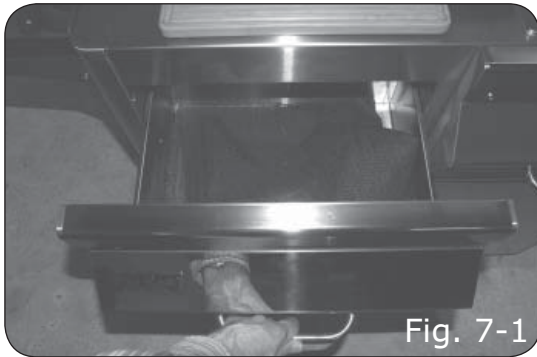


Removing the clean ice storage drain plug



 Release drawer slider prior to removal

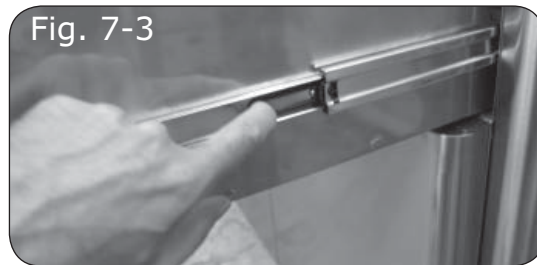

Stemmed glass storage racks under top

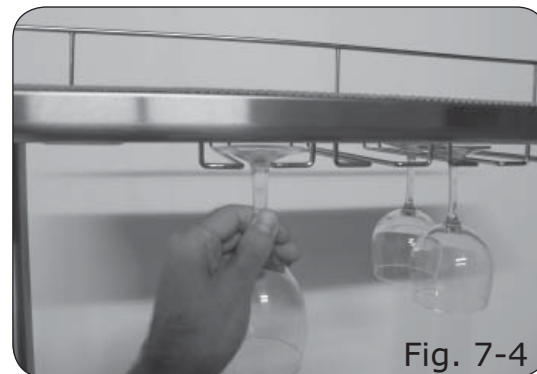 

Waste basket (Cart only)



Fig. 7-5

## Doors and Drawers

The left top drawer (Fig. 7-1) is for tool/utensil storage. The blender container and other such items may be stored effectively in this drawer.

The right top drawer is for storage of clean ice. Open the drawer, make sure the stopper is in place (Fig. 7-2), and pour the ice into the basin. Close the drawer to protect the ice from wind and debris and to keep it shaded. Open the drawer and remove the stopper to allow melted ice to drain into a basin or onto the patio. Wipe out or clean as needed.

The two basins inside the door on the right of the cart (only) are for iced beverage storage. The drawers may be removed to facilitate dumping of used ice. To remove a drawer, pull it all the way out and then pull forward on the elongated plastic rings inside the runners on each side of the drawer to release the runner locks (Fig 7-3). Then lift upward and outward on the drawer until it comes free of the runners.

To reattach a drawer, extend the runners completely and set the drawer onto them, then slide the drawer closed. You may hear a clicking sound as the plastic locks set. Open the drawer to verify the elongated plastic rings are again locked in place and the drawer will not slide off if pulled completely out.

Both cart doors are held in place magnetically when closed.

## Storing and retrieving wine glasses

Many wine glasses may be stored on the underside of the lighting rack. Invert a stemmed wine glass and slide the base of the stem into the wire guide as shown in Fig. 7-4. Do not store more than 35 lbs. on the shelf.

## Using the waste basket (cart only)

The rubber waste basket fits into the stainless-steel loop attached to the inside of the left cart door (Fig. 7-5). Once in place it becomes a convenient place to store waste. When full, simply lift the trash can out of the supporting loop, empty, and replace.

### **⚠ WARNING**

 
Total weight on the upper storage shelf must not exceed 35 lbs.

## OPERATION (Cont.)

### **⚠ CAUTION**

Do NOT place fingers near hinge when closing.

Raise/lower left shelf (holders removed)

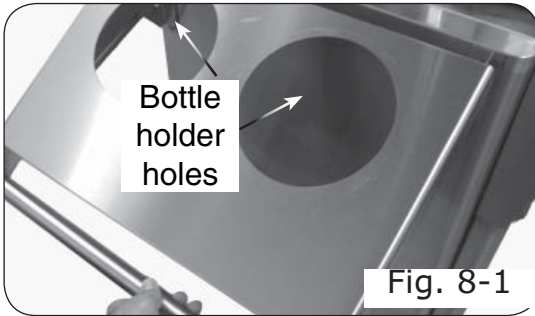

### **⚠ CAUTION**

The paper-towel holder must be folded back against the barbecue before lowering the folding shelf (see above). Failure to do so could result in damage to the beverage center.

Paper-towel holder (cart only)



### **Important:**

Wine bottle/food containers must be removed prior to collapsing the left-hand shelf.

Using the sink



### To lower or raise shelves (cart only)

- A.** To lower the shelf, grasp the shelf away from the hinges and lift the whole shelf upward so that the shelf lifts up and out of the locking slot at the hinge. With the hinge unlocked, use the handle to allow the end of the shelf to slowly rotate down (Fig. 8-1). Once the shelf is flat against the side of the cart, allow the hinge to lower back down into a locked position.
- B.** To raise the shelf, perform the opposite of **A.** above. Grasp the shelf away from the hinge and lift upward until the hinge comes out of the locking slot. Then rotate the shelf upward until it is completely horizontal and drop the hinge back into the locking slot, keeping fingers and other objects away from the hinges.

### Adjusting and refilling the paper-towel holder

To use the paper-towel holder:

- 1.** Make sure the collapsible barbecue shelf is extended and locked.
- 2.** Grasp the rounded end of the paper towel holder firmly (without compressing it) and pull it away from the side of the barbecue so that it rotates toward the front of the barbecue and locks into the extended position.
- 3.** Slide a roll of paper towels over the rounded end of the paper-towel holder until the entire roll is on the holder and past the retaining lip (Fig. 8-2).

When not in use, the rack may be folded back out of the way by firmly grasping the rounded end of the holder and rotating it back into position against the wall of the barbecue.

### Using the sink

#### Turn on/off water

Turn the knob to the left to open the valve and let water flow from the faucet. Turn the knob back to the right until tight to close the valve and to stop the flow of water from the faucet.

#### Use the drain stopper

The drain stopper will catch large particles of food or ice and prevent them from going down the drain. It can then be removed and cleaned out. Alternately, the stopper can prevent water from going down the drain when it is pressed firmly down into the drain.



## OPERATION (Cont.)

Fig. 9-1



### Changing the bulbs

#### **WARNING**

To protect from potentially sharp sheet metal and glass, wear gloves and safety glasses during this procedure.

1. Turn off all water sources and shut off or disconnect electrical power from the unit.

**Important:** Place one hand directly below the glass lens and prepare to catch it when it is detached.

2. Carefully insert your fingernail or a thin plastic spatula between the glass lens and the stainless steel on which the light is mounted, and gently pry the glass lens out (Fig. 9-1). Catch the lens (Fig. 9-2) and set it safely aside.

**Note:** You may wish to take this opportunity to clean the lens with a standard household window cleaner and then dry it completely.

3. Wearing a pair of gloves, reach into the fixture, gently grab the bulb (Fig. 9-3), and pull it straight down and out of the fixture so that the two pins at the base of the bulb come all the way out.

**Important:** Bulb is halogen. DO NOT TOUCH with bare hands. Oils from hands drastically reduce bulb life.

**Note:** It may be helpful to rock the bulb gently backward and forward while pulling it out.

4. Insert the new bulb into the socket so that both pins slide all the way into the two holes in the bottom of the socket and the bulb remains in place after being released.

5. Place the lens back into the fixture opening with the curved cut-out toward the back and snap it firmly but gently back into place.

Fig. 9-2



Fig. 9-3



Fig. 9-4



### Barbecue Covers

 
To reduce the need for cleaning, cover your beverage center between uses with the Fire-Magic® custom cover (Fig. 9-4).

Always remove items from the upper storage area before covering to prevent them from being knocked off during covering or uncovering.

Uncover the beverage center with care. Always lift or slide the cover gently off the upper storage rack. Never pull sideways, as the rack may be damaged or loosened.

## CLEANING AND MAINTENANCE

Always wipe with grain

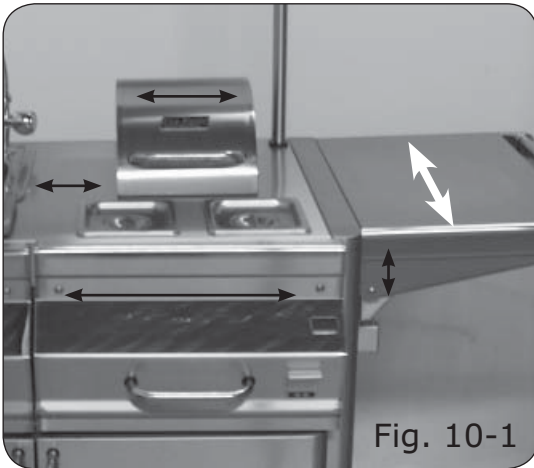

### Care and cleaning

Clean up spills as required with a damp cloth or sponge or a non-abrasive low-acid cleaning solution. For heavy cleaning, clean with a quality stainless-steel cleaner at least once a year (or more frequently, depending on your climate). Follow the directions on the cleaner. Always wipe in the direction of the grain (see Fig. 10-1).

You may find it useful to first remove the blender from the stainless-steel housing (see the section in this instruction, *Place blender in blender mounting*, or separate blender instructions).

In a humid environment, due to the nature of stainless steel, iron oxide deposits may appear. Such deposits are removable using stainless-steel cleaner.

Store the blender container in a drawer and close the stainless-steel lid over the blender base to protect it when not in use.

Cover your beverage center when not in use (see *Barbecue Covers* on previous page).

## WARRANTY

### PLEASE COMPLETE AND RETURN YOUR REGISTRATION CARD, WHICH IS INCLUDED WITH YOUR BARBECUE

**LIFETIME WARRANTY** - Fire Magic® cast stainless-steel burners, stainless-steel rod cooking grids, and stainless-steel housings (including liners, frames, ovens, and barbecue faces) are warranted for as long as you own your Fire Magic® barbecue.

**FIFTEEN-YEAR WARRANTY** - Fire Magic® cast brass burners, brass valves, backburner assemblies (except ignition parts), manifold assemblies, and porcelain hoods and faces are warranted for 15 years from the date of purchase of your Fire Magic® barbecue.

**THREE-YEAR WARRANTY** - Fire Magic® sideburners and all other Fire Magic® barbecue components (except ignition and electronic parts) are warranted for three (3) years from the date of purchase of your Fire Magic® barbecue.

Fire Magic® ignition systems, electronic components (including lights and thermometers), and barbecue accessories are warranted for one (1) year from date of purchase.

### PLEASE KEEP A COPY OF YOUR SALES SLIP FOR PROOF OF PURCHASE

This warranty applies to the original purchaser with invoice or proof of purchase and covers Fire Magic® products intended for personal, family, or household usage only. It does not apply to rust, corrosion, oxidation, or discoloration, which may occur due to moisture or overheating, unless the affected component becomes inoperable. This warranty does not cover parts becoming defective by misuse, accidental damage, improper handling, and/or installation. It does not cover labor or labor-related charges. It specifically excludes liability for indirect, incidental, or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specified legal rights and you may have other rights that may vary from state to state.

For additional information regarding this warranty, or information on how to place a warranty claim, contact your authorized Fire Magic® dealer.