



ELECTRIC WARMING DRAWER

MODEL #33830-SW

FEATURES:

- EASY INSTALLATION
- TEMPERATURE RANGE UP TO 230°F
- MOISTURE REGULATION
- CONCEALED CONTROL

INSTALLATION AND OPERATING INSTRUCTIONS



SAFETY WARNINGS & CODES

PLEASE READ AND FOLLOW

- Removing permanently affixed rating labels warnings **WILL** void the warranty.
- Observe all local codes and ordinances when installing this appliance. If no local codes are applicable, wire unit in accordance with the National Electrical Code, ANSI/NFPA 70 latest edition.

WARNING

To minimize the risk of property damage and/or personal injury, **do not** use a flexible extension power-supply cord in addition to the one supplied with this appliance.

WARNING

When connecting this appliance to a power supply make sure that it is the same voltage as the unit rating. Improper connection may cause severe damage to the components or decrease the performance of your Fire Magic Electric Warming Drawer. A rating plate specifying voltage, hertz, wattage, amps, and phase is attached to the unit and also located on Page 2. To avoid the risk of property damage and/or personal injury, installation work and electrical wiring must be performed by a qualified, professional installer. This appliance must be installed in accordance with this instruction.

GENERAL INFORMATION

- When installing this unit directly below another unit, only install with Fire Magic built-in products.
- This appliance does not contain a fuse or surge protector.
- The power to the unit must be made readily accessible to the operator through means of a line disconnect switch, circuit breaker and/or easy to reach receptacle.
- For safe operation ensure that the unit is grounded properly per applicable electrical codes.
- Not following these instructions exactly will void the manufacturer's warranty.
- For outdoor installation, the circuit must have ground fault interrupt.

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION

INSTALLER: Leave these instructions with consumer.
CONSUMER: Retain for future reference.



Robert H. Peterson Co. • 14724 East Proctor Avenue, • City of Industry, CA 91746

INSTALLATION

REQUIRED OPENING: 21"D x 31 1/2"W x 13 1/2"H

Before installing your Fire Magic Warming Drawer, remove the drawer by first pulling it out until fully extended. Then release the right and left side drawer glide release latches by simultaneously pulling them forward. Then pull out the drawer (see Fig. 2-1).


INSTALLATION

STEP 1: In order to properly support the weight of your warming drawer, it is necessary to provide a secure, level surface in the rear of the unit. (See 'Side View' drawing below). This may be accomplished by using bricks, 2 X 4's, etc. Be sure that the height of this rear support is 1/8" higher than that of the front opening support, so that your drawer sits level.


STEP 2: Apply silicon caulking (supplied with your unit) around the back of the warming drawer cabinet trim before sliding the cabinet assembly into the opening.

STEP 3: Fasten unit securely into masonry using lag bolts (not supplied) through the installation screw slots in the top and bottom of the unit (see drawings below). Once all four bolts are fastened securely, be sure to snap the supplied plugs firmly into place over the screw slot openings. This will prevent heat loss and moisture from entering the unit.

STEP 4: Reinsert the drawer by reconnecting the drawer glides.

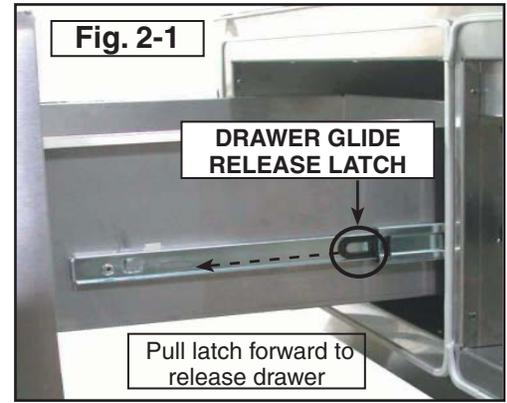



WARNING: Be sure to unplug unit before servicing and allow heating elements to cool before removing drawer.

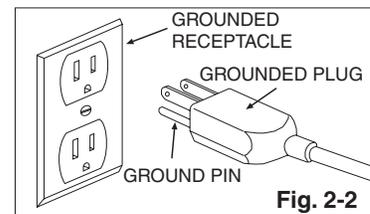

Important: This product is for use on a standard 120-volt AC circuit and has a grounded plug like the plug in Fig. 2-2. If it does not fit the receptacle, have a proper outlet installed by a qualified electrician. DO NOT modify the plug provided with this product.

VOLTS	WATTS	AMPS	HZ
120	475	3.96	60

IMPORTANT: MUST BE USED WITH A GFI EQUIPPED OUTLET OR CIRCUIT.

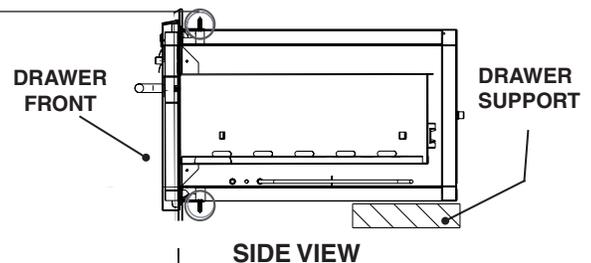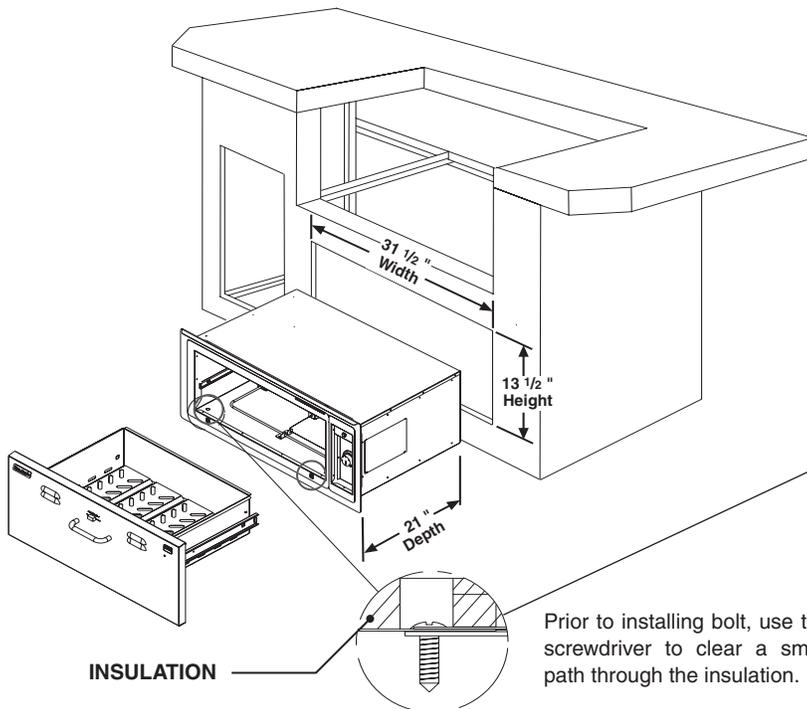

OPERATION


Operating your Fire Magic Warming Drawer is just as simple as the installation process.

TEMPERATURE CONTROL

The temperature of your warming drawer can be set to a maximum of 230°F to accommodate any and all of your warming needs. The low settings are perfect for plate and bread warming, while high settings are useful in keeping soups and sauces piping hot.

HUMIDITY CONTROL


Your electric warming drawer is equipped with a sliding humidity control knob that allows you to regulate the humidity inside the drawer. To make it more convenient, adjusting the moisture is done without opening the drawer and affecting the interior temperature and/or humidity. Open the vents to keep foods crisp; close the vents to keep foods moist (add water to the moisture cup to increase the interior humidity).

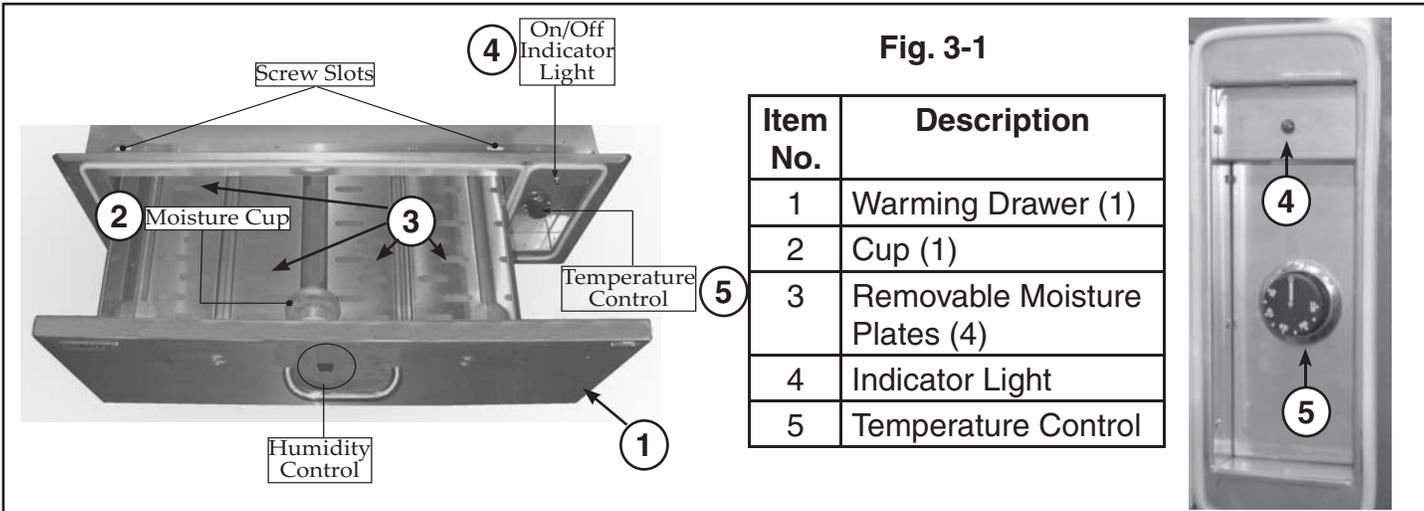

CARE AND MAINTENANCE

The following care instructions will keep your unit looking and working like new. Meticulous attention has been given to maintain the attractive finish throughout the manufacturing process. Like the stainless steel used in commercial kitchens, your warming drawer requires regular cleaning and occasional buffing to maintain its bright, clean appearance (the inner drawer is removable for easy cleaning).

Deposits of dirt and grease can be removed easily with ***Fire Magic Foaming Barbecue and Grill Cleaner**. Deposits should be removed before they are allowed to bake onto the finish. To remove more stubborn deposits, we recommend using a copper scouring pad. Be sure to always rub in the direction of the polishing lines (Fig. 3-2). Oven cleaner may be used, according to manufacturer's instructions, to remove cooked-on food deposits. Special cleaning agents and polishing pads recommended for stainless steel are available at your local barbecue dealer, hardware store or supermarket.

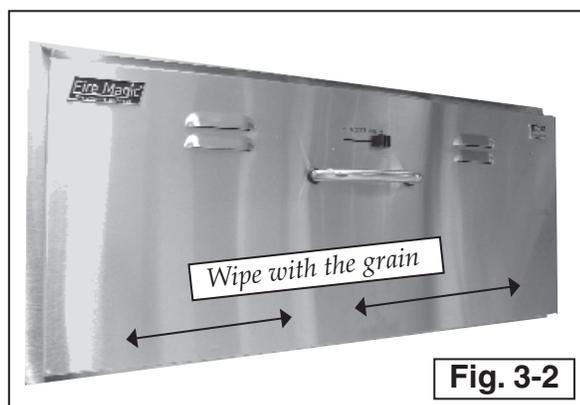

CAUTION: Never use ordinary steel wool or steel brushes on stainless steel. Tiny particles left behind will rust and stain the finish. Abrasive pads recommended for restoring the grain in stainless steel will, over a period of time, scratch or dull the surface of glass or porcelain-coated products.

**Available from your nearest Fire Magic Dealers*

FIRE MAGIC WARRANTY

PLEASE COMPLETE AND RETURN YOUR REGISTRATION CARD WHICH IS INCLUDED WITH YOUR BARBECUE

LIFETIME WARRANTY - Fire Magic Cast Stainless Steel Burners, Stainless Steel Rod Cooking Grids and Stainless Steel Housings (including liners, frames, ovens and barbecues faces) are warranted for as long as you own your Fire Magic Barbecue.

FIFTEEN (15) YEAR WARRANTY - Fire Magic Cast Brass Burners, Brass Valves, Backburner Assemblies (with the exception of the ignition parts), Manifold assemblies and Porcelain Housings (including liners, frames, ovens and barbecues faces) are warranted for 15 years from the date of purchase of your Fire Magic Barbecue.

THREE (3) YEAR WARRANTY - Fire Magic Sideburners and all other Fire Magic Barbecue components (with the exception of the ignition parts) are warranted for 3 years from the date of purchase of your Fire Magic Barbecue.

ONE (1) YEAR WARRANTY - Fire Magic ignition systems and barbecues accessories (including Warming Drawer) are warranted for one year from date of purchase.

PLEASE KEEP A COPY OF YOUR SALES SLIP FOR PROOF OF PURCHASE

This warranty applies to the original purchaser with invoice or proof of purchase and covers Fire Magic products intended for personal, family or household usage only. It does not apply to rust, corrosion, oxidation or discoloration, which may occur due to moisture or overheating, unless the affected component becomes inoperable. This warranty does not cover parts becoming defective by misuse, accidental damage, improper handling and/or installation. It does not cover labor or labor related charges. It specifically excludes liability for indirect, incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specified legal rights and you may have other rights which may vary from state to state.

For additional information regarding this warranty, or information on how to place a warranty claim, contact your authorized Fire Magic Dealer.

ADDITIONAL FIRE MAGIC ACCESSORIES



Rotisserie Cradle - Model 3619 (shown)



Barbecue Light
Model 3577



Grill Topper Tray - Model 3563



15" Wok - Model 3572



Fire Magic Tool Set - Model 3575



Portable Nylon Cover Model 5185-20



Refrigerator 4.4 cu.ft. - Model 3590



Portable Barbecue Light Model 3578



Smoker Box - Model 3561

Contact your local Fire Magic Barbecue Dealer for Details.